

Battery Kiosk Assembly Instructions



VESCO CLEAN ENERGY

3272026.1-F Kiosk Assembly Instructions - 1.0
Effective Date: 03-27-26





Step 1

Attach the front cabinet panel with the left panel. These pieces will fit together like puzzle pieces. Attach the L clips with the flanged side to the side of the kiosk. *Pro Tip: Hook the front clip cut-out and push down to secure.*

Be cautious not to pinch your skin when applying!



Step 2

Attach the top and bottom. These pieces will fit together like a puzzle. Attach the L clips with the flanged side to the outside of the kiosk.

Be cautious not to pinch your skin when applying!



Step 3

(if applicable) Find the cut-out space on the inside of the front cabinet face. This area is to mount the Stat-X extinguisher.

To install the Stat-X extinguisher:

1. Align the bracket within the cut-out and mark the screw holes. It is suggested to install at the upper right of the cut-out.
2. Pilot the screw holes by using the tip of a Phillips screwdriver to push an indentation or using a 1/16" drill bit. Take caution not to drill all the way through as this will compromise the shell.
3. Using the provided screws, secure the Stat-X bracket to the marked location. Tighten to snug without over torquing.
4. Mount the Stat-X extinguisher as pictured at approximately 72 degree angle. Use a 7/16" wrench to snugly tighten the bracket.





Step 4


Attach the right panel. These pieces will fit together like puzzle pieces. Attach the L clips with the flanged side to the side of the kiosk. *Pro Tip: Hook the front clip cut-out and push down to secure.*

Be cautious not to pinch your skin when applying!



Step 5

Attach the headboard to the upper backside of the unit. The logo will face downward.

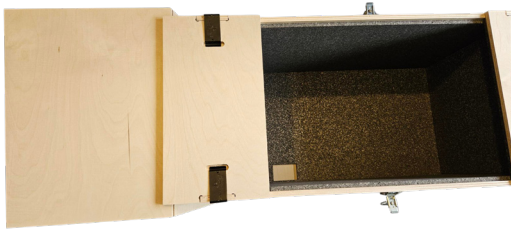

Step 6

Attach the headboard plate to the backside of the headboard. Attach the L clips with the flanged side to the side of the unit.

Be cautious not to pinch your skin when applying!



Step 7



Attach the foot plate to the bottom backside of the unit. Attach the L clips with the flanged side to the side of the unit.

Be cautious not to pinch your skin when applying!



Step 8

Insert your container inside the kiosk. Make sure the handle is towards the back but facing upwards or full forward and down as seen in the photos.

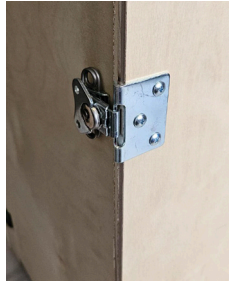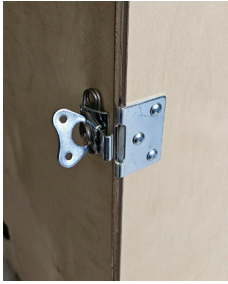

Step 9

Attach the back plate using the grappling latches. To open the latch, spin the latch wing upwards and spin counterclockwise to open, clockwise to close and lock. When secure, fold the wing forward.



Step 10

Attach the terminal protection bag holder by removing the tape film and applying in the location of your choice. Insert the terminal protection bags into the holder. Place the tape dispenser on top of the kiosk. The tape may also be used to terminally protect both ends of the battery. Install the Start Accumulation Date sticker in a visible location. Use a dry-erase marker to document the date the first battery was installed into the container. Container must be moved within 365 days for compliance. Erase and apply a new date when a new container is used.



Step 11

(if applicable) Secure the binder holder to either side of the kiosk using the 2 remainder screws with a Phillips screwdriver: Mark the locations and insert the screws. Leave about 1/8" gap to install the holder. The holder slides and locks onto the screw heads.

Assembly Complete!

Position the kiosk approximately 1 foot away from a wall to access to back panel.

