

Lead-Acid and Cadmium Wet Cell Battery Packing Instructions

This informational guide is meant to be used as best-practice.
Follow all Business, Local, State, and Federal regulations for your
safety and compliance.

Federal Reference
Sources:
49 CFR 173
40 CFR 273

Personal Protective Equipment

(Recommended for your safety)



- Cut-resistant gloves (a), or
- Electrical hazard gloves (b), or
- Fire-rated gloves (c).

(Base on your own assessment)



- Face shield or safety glasses.

(Base on your own assessment)



- Cotton clothing.

(Base on your own assessment)

PACKAGING


WET CELL PALLETIZED

Package preparation

1. Pallet with cardboard insert pad
2. Affix identification label
3. Pallet stack height depends on battery size
 - Use cardboard insert pads in between layers
 - No more than 3 layers high

After container is filled


1. Install cardboard on top layer
2. Stretch wrap the pallet THOROUGHLY and tightly to prevent spillage
3. Apply non-metal banding vertically

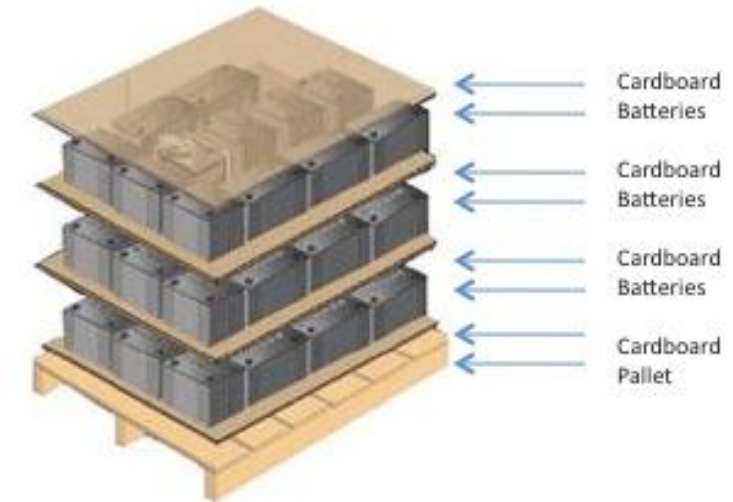

DOT LABELING REQUIRED PALLET MUST BE LABELED ON ALL SIDES

- Class 8 label with appropriate UN# (4 sides)
- “Do Not Stack” label (4 sides), if applicable

[eCFR :: 49 CFR 173.159 -- Batteries, wet.](#)

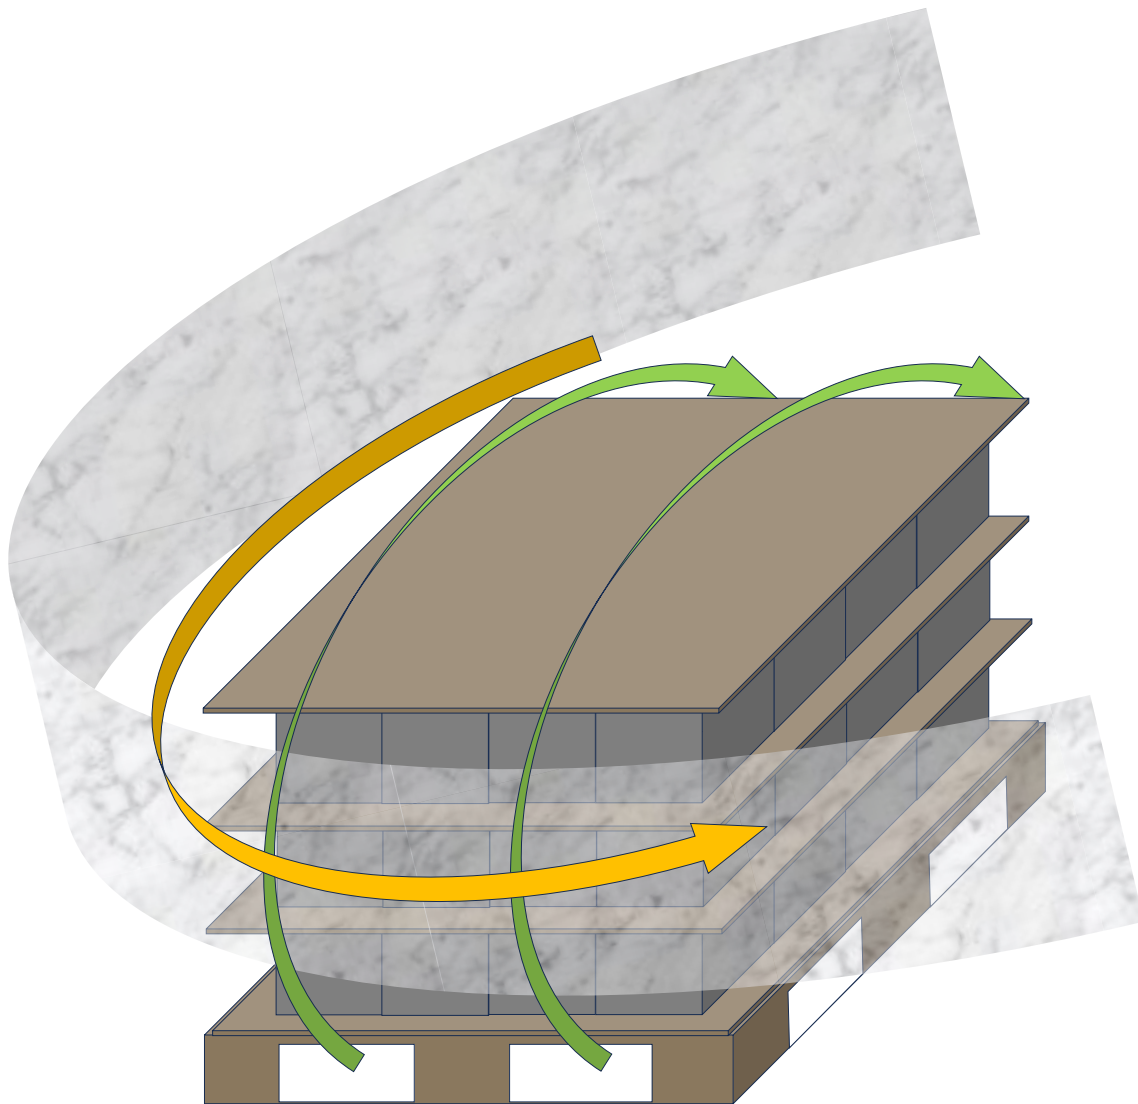

Place on all 4 sides

**DO NOT
DOUBLE
STACK**



Contact your Sales Rep at Vesco Clean Energy for any questions, concerns, or completion of container.

Call: (800) 527-5358

Email: batteryhelp@vescocleanenergy.com



VESCO CLEAN ENERGY